


Vertical Mounting to Poles

STEP


1

Nut & Bolt your L-bracket onto the Pole
The bolt will need to go straight through pole.

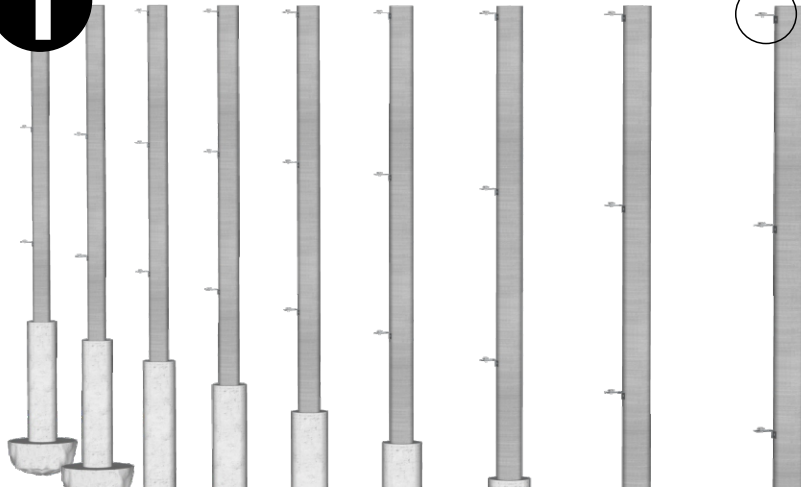

STEP


2

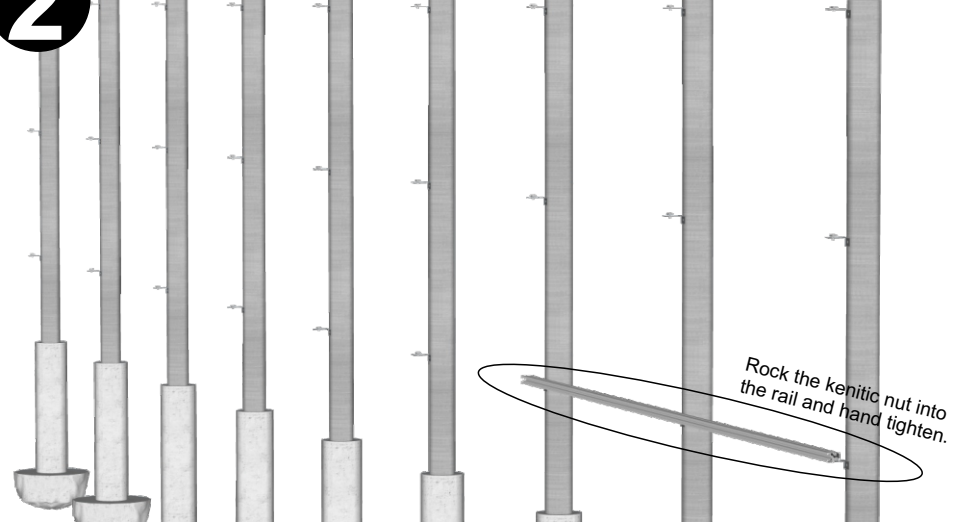

STEP

3

Complete attaching all rails and use the joiners to fasten the rails together as one long rail. Now use ratchet to tighten everything.

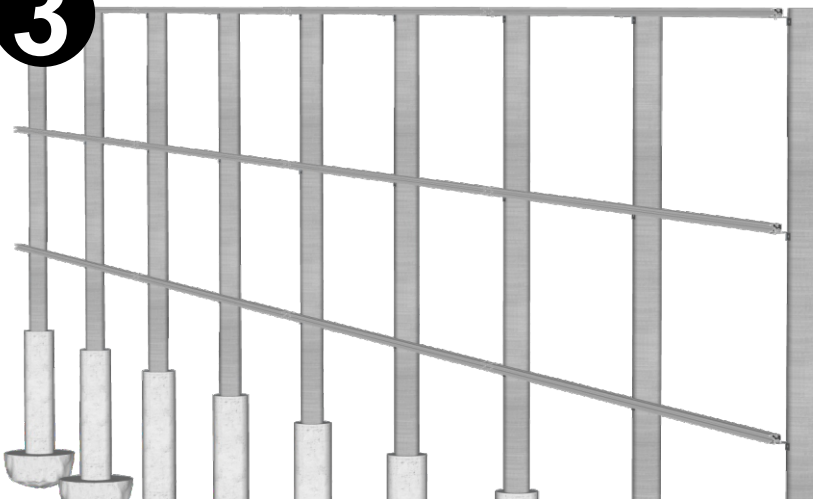

STEP

4

Clamp panel into place starting with end clamps and leave the mid clamp loose for the next panel to slide in and then tighten mid clamp.

